

## SmartCode™

# Electronic Deadbolt with Z-Wave Technology

### OVERVIEW

---

Pocket fishing for your keys is over! The Smart Code™ Electronic Deadbolt with Z-Wave Technology enables you to securely lock and unlock your home from anywhere, send guest access codes, monitor lock activity, and connect to other smart home devices at anytime through your Alarm.com app. With one touch locking, the Smart Code™ Electronic Deadbolt provides you with convenience as well as security.



Venetian Bronze



Lifetime Polished Brass



Satin Nickel

## INCLUDED MATERIALS

---

- Latch
- Interior/ Exterior Assembly
- Strike
- Keys
- Batteries
- Adapter Ring
- Mounting Plate
- Smart Key Tool
- Fasteners

## DEVICE BENEFITS

---

- Up to 30 user access codes for family and guests plus master code feature for added security
- Secured keyless entry convenience
- Motorized deadbolt enable true remote locking and unlocking
- Replaces existing deadbolt with just a screwdriver
- No hard wiring needed

## DEVICE FEATURES

---

- Z- Wave Plus Certified with the Z - Wave 500 chipset
- Extended wireless range and superior 128 - bit wireless encryption
- 5 digit keypad with dedicated lock button
- One touch locking
- Lock Button is Backlit for 30 seconds
- Fits standard doors
- Drill and pick resistant backup keyway with Bump Guard™ protection
- Audit trail logging stores access history in the lock memory
- Incorrect code protection with audible alarm

## COMPATIBLE TECHNOLOGIES

---

- Alexa
- SmartThings
- Vera
- Wink

## IMPORTANT THINGS TO KNOW


---

### Exterior Doors

The SmartCode Electronic Deadbolt can be installed on exterior doors **only**.

### Installation

An exterior door cannot include both a door lever and a SmartCode Electronic Deadbolt.

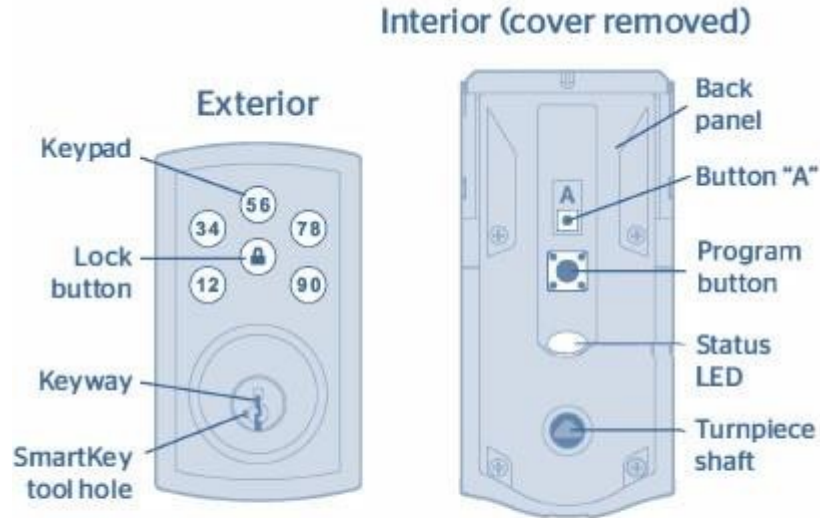

**Note:** When the cover is removed, the turnpiece shaft can be used to manually lock and unlock the door.

STATUS LED

The Status LED blinks every 6 seconds to communicate whether the door is locked or unlocked. This feature is on by default.

**Blinking Green: Unlocked**

**Blinking Amber: Locked**

**Blinking Red: Low Battery**

**Solid Red: Unsuccessful door handling process**

Turn Status LED On/ Off:

1. Press Program button once.



2. Press button "A" once.



3. Press button "1-2" multiple times if needed to reach desired state.






4. Press Lock button once.


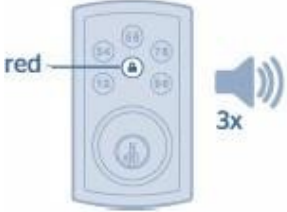


It is recommended that you add and delete all user codes through your smart home control system. If your system does not allow this, codes may be added directly to the lock as shown here.

**Programming Timeout**

During programming, if no button is pressed for five seconds, the system will time out ( indicated by three beeps and a red flashing lock button ), and you will need to restart the procedure.

<p>1. Make sure the door is open. Press the Program button once.</p> 	<p>2. Enter used code. A total of 30 user codes may be programmed.</p> 	<p>3. Press Lock button.</p> 
--------------------------------------------------------------------------------------------------------------------------------------------------------	----------------------------------------------------------------------------------------------------------------------------------------------------------	------------------------------------------------------------------------------------------------------------------

<p>4. What lights and sounds does the lock produce?</p>	
<p>Lock button flashes green once with one beep</p>  <p>Programming was successful.</p>	<p>Lock button flashes three times with three beeps</p>  <p>Programming was unsuccessful.</p> <p>Make sure not to pause for more than 5 seconds during programming.</p> <p>Make sure the user code is not a duplicate and that it is between 4 and 8 digits during your next attempt. Make sure the lock has room for an additional code. If all user code positions are filled, delete a code to make room for this one.</p>

**Master Code**

For enhanced security, a master code may be used when adding and deleting user codes.

ALERT	REASON	SOLUTION
Lock button flashes once with one beep*.	One incorrect code entered.	Re- enter code.
Lock button flashes red 3 times with 3 beeps*.	No user code programmed.	Program at least one user code.
	Programming timeout after five seconds.	Attempt programming procedure again.
	Unsuccessful programming.	
Lock button flashes red 15 times with 15 beeps*.	Three incorrect codes entered within one minute.	Re- enter code after 60 second keypad lockout.
Lock button flashes red with fast beeping sound for 3 to 4 seconds.	Low battery.	Replace batteries.
Lock button flashes green with continuous beeping sound for 2 seconds.	Door jammed while attempting to lock.	Manually re- lock door. If needed, reposition strike.

DELETING A SINGLE USER CODE

**Note:** All codes may be deleted at once if the master code is enabled.

If no button is pressed for 5 seconds, the system will time out, and you will need to restart the procedure.

1. Press Program button once.



 
4. Press Lock button once.



2. Press Lock button once.



5. Re- enter user code.



3. Enter user code to be deleted.











6. Press Lock button once.







**If unsuccessful:** Make sure to enter the same valid code in steps 3 and 5.

Auto-lock automatically re-locks the door after unlocking. This feature is set to 30 seconds and is turned off by default.




Turn Auto- Lock On/Off		Change Auto- Lock Time Delay		
1. Press Program button once. 	2. Press button "A" once. 	1. Press program button once. 	2. Press button "A" once. 	
3. Press button "3-4" multiple times if needed to reach desired state. 	4. Press Lock button once. 	3. Press button "9-0" once. 	4. Press button once that corresponds to desired time of day:  "1-2" 30 sec. "3-4" 60 sec. "5-6" 90 sec. "7-8" 120 sec. "9-0" 180 sec.	5. Press Lock button once. 

MUTE/UNMUTE AUDIO

Audio is on by default.




1. Press Program button once. 	2. Press button "A" once. 	3. Press button "5-6" multiple times if needed to reach desired state.   Green lock button: Feature is enabled Red lock button: Feature is disabled.	4. Press Lock button once. 
----------------------------------------------------------------------------------------------------------------------	------------------------------------------------------------------------------------------------------------------	------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------	---------------------------------------------------------------------------------------------------------------------

If needed, the door handling process can be initiated manually. This is useful if the lock is being moved to a different color.

<p>1. Remove battery pack.</p> 	<p>2. Press and HOLD the Program button while reinserting the battery pack. Release button once battery pack is installed. The status LED will flash red and green.</p> 	
<p>3. Press the Program button once more.</p> 	<p>4. The latch bolt will extend and retract to learn the orientation of the door.</p> <p>The Status LED will indicate success or failure.</p>	<p>5. <b>Success:</b> LED flashes <b>green</b>  <b>Failure:</b> LED remains <b>solid red</b></p> <p>If the Status LED indicates a failure, see the online Programming and Troubleshooting Guide or call Technical Support.</p>

FACTORY RESET

A factory reset will delete all codes associated with the lock, and it will remove it from your smart home system.

<p>1. Remove battery pack.</p> 	<p>2. Press and HOLD the Program button while reinserting the battery pack. Keep holding the button for 30 seconds until the lock beeps and the status LED flashes red.</p> 
<p>2. Press the Program button once more. When the LED flashes green and you hear one beep, the lock has been reset.</p> 	<p>4. After a few seconds, the lock will initiate the door handling process, and the latch bolt will extend and retract to learn the orientation of the door.</p>



1. Read all instructions in their entirety.
2. Familiarize yourself with all warning and caution statements.
3. Remind all family members of safety precautions.
4. Protect your user codes and master code.
5. Dispose of used batteries according to local laws and regulations.



**CAUTION:** Prevent unauthorized entry. Since anyone with access to the back panel can change the user codes, you must restrict access to the back panel and routinely check the user codes to ensure they have not been altered without your knowledge. The use of a master code can help protect your system's settings .



**WARNING:** This Manufacturer advises that no lock can provide complete security by itself. This lock may be defeated by forcible or technical means, or evaded by entry elsewhere on the property. No lock can substitute for caution, awareness of your environment, and common sense. Builder's hardware is available in multiple performance grades to suit the application. In order to enhance security and reduce risk, you should consult a qualified locksmith or other security professional.